

EV-301 interface panel: Instructions for replacing SP-300



DANGER:

Risk of electrocution. Works on this equipment should only be carried out by a qualified and competent electrical person. Observe all electrical safety regulations and safe systems of work. Check power supply has been isolated or disconnected safely before removing equipment covers.




INSTRUCTIONS

1. Safely isolate the mains power supply to the SP-300 panel before removing the cover. Take caution as the panel will remain energised from the batteries.
2. Loosen the four screws and remove the cover. Carefully remove the battery pack by disconnecting the battery lead from the board to completely de-energise the panel. Check and confirm the 230V mains supply and 24V backup supply output is dead.
3. Label or identify the existing wiring connections and take note of the existing DIP switch settings.
4. Disconnect all cabling and remove the SP-300 panel.
5. Mount the replacement EV-301 in place and re-route the cables through the rear cable entry. Secure the cables using the cable ties against the cable entry teeth.
6. Rewire the 2 core data cable linking the panels as shown in the diagram for the applicable panel location and function.

SUITABLE FOR:



Data cable wiring diagram:

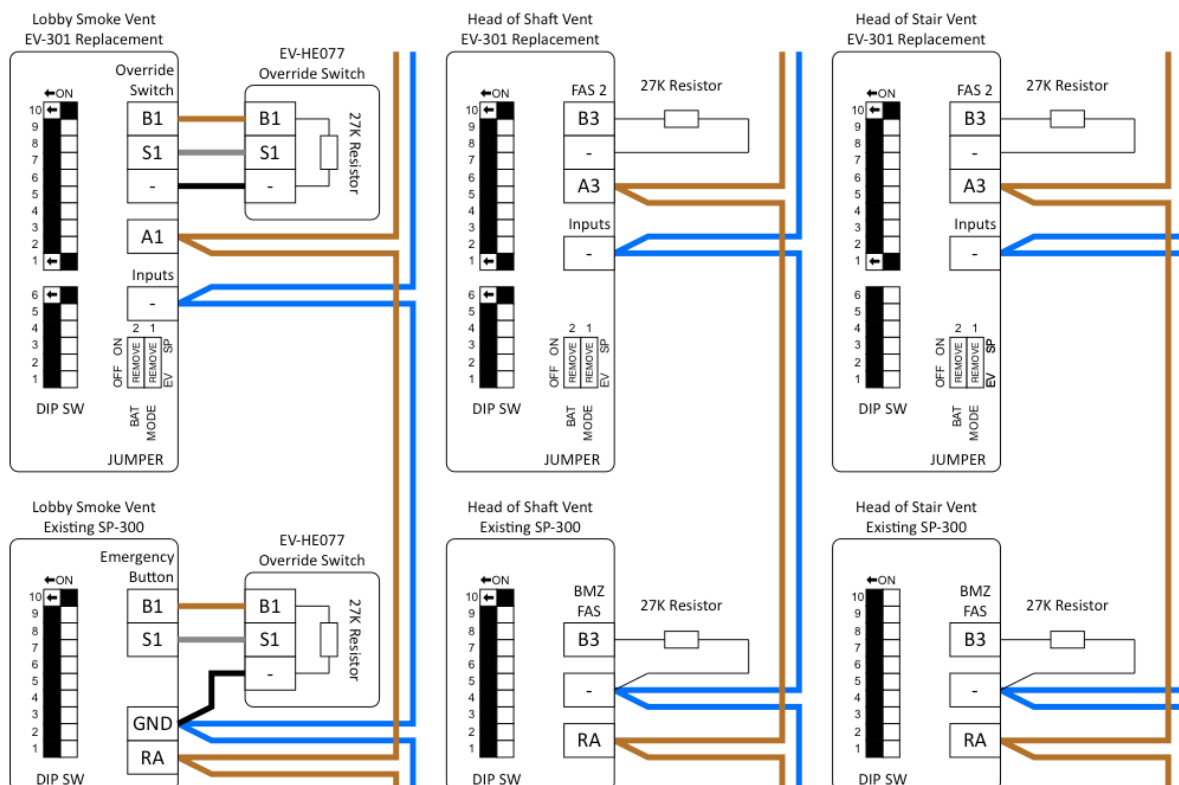

Instructions continue on next page

INSTRUCTIONS (CONTINUED)

7. Reconnect the remaining cables following the cross-reference table.

Connection cross-reference table:

SP-300 description	SP-300 terminal	EV-301 terminal	EV-301 description
Emergency button	B1	B1	Override switch
	S1	S1	
	GND	-	
Wind/rain	-	-	Inputs
	E	ES	
	LZ	LZ	
Motor 1	S	S	Motor 1
	G	G	
	O	O	
Motor 2	S	S	Motor 2
	G	G	
	O	O	
Vent switch	E	E	Inputs
	Z	Z	
	A	A	
Smoke detector	B2	B2	FAS 1
	-	-	
	RA	A2	
FAS	B3	B3	FAS 2
	-	-	
	RA	A3	
Contact 1	NO	NO	Contact
	C	C	
	NC	NC	
Contact 2	NO	n/a	Not available
	C	n/a	
	NC	n/a	

8. Remove the two jumper links and set the DIP switches for the panel location and function as shown in the wiring diagram above.

9. Set the other DIP switches to match the existing configuration:

Dip switch cross-reference table

SP-300	EV-301	Description
SW1-1	SW1-1	Daily ventilation functions
SW1-2	SW1-2	
SW1-3	SW1-3	
SW1-4	SW1-4	
SW1-5	n/a	Signal Contact functions *Only programmable by SimonLink or on request
SW1-6	n/a	
SW1-7	n/a	
SW1-8	n/a	Factory set to operate on an Alarm condition
SW1-9	SW1-5	Default vent position on alarm
SW1-10	SW1-6	FAS automatic reset behaviour

10. Insert batteries and reconnect to the board.

11. Switch on mains power supply to energise panel.

12. Replace cover and test the operation of the complete system.

ATTENTION: Under the Construction Products Regulations (CPR) it is a legal requirement to use only certified products for smoke ventilation. It is the responsibility of the installer to ensure installations meet the relevant standards.

Group SCS reserves the right to alter the specification of its products from time to time without notice. Although every effort has been made to ensure the accuracy of the information contained in this document it is not warranted or represented by Group SCS to be a complete and up-to-date description. For further information visit www.groupscs.co.uk